

Thank you for choosing the Encolor T10 lighting controller. Use the dipswitch to match the DMX traits of your lighting fixture. Set the DMX start address of your lights to 1.

